

NO STICKING



1-3/8" FLAT PANEL NO STICKING




1-3/4" FLAT PANEL NO STICKING




1-3/8" 9/16" PANEL NO STICKING




1-3/4" 5/8" PANEL NO STICKING 20MIN

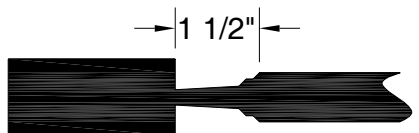


1-3/8" 7/8" PANEL NO STICKING

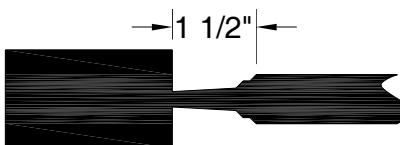

1-3/4" 7/8" PANEL NO STICKING

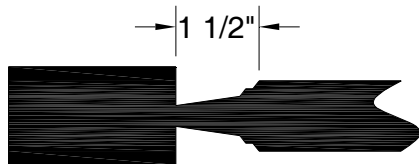


1-3/4" 1-1/4" PANEL NO STICKING

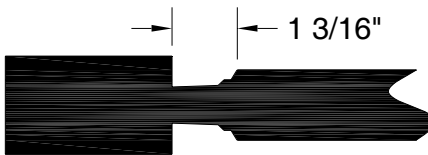


1-3/4" 1-1/4" PANEL NO STICKING 20 MIN.


ROUND STICKING




1-3/8" FLAT PANEL 1/4 ROUND STICKING




1-3/4" FLAT PANEL 1/4 ROUND STICKING

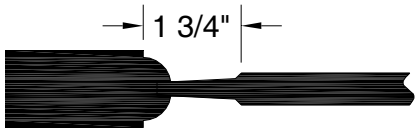


1-3/8" 9/16" PANEL 1/4 ROUND STICKING

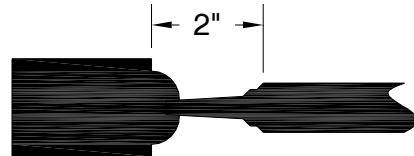


1-3/4" 7/8" PANEL 1/4 ROUND STICKING

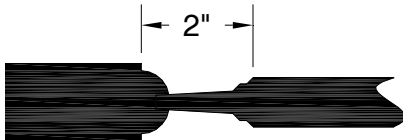

1-3/8" 7/8" PANEL 1/4 ROUND STICKING

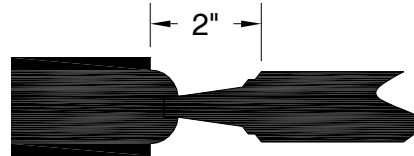

1-3/4" 1-1/4" PANEL 1/4 ROUND STICKING

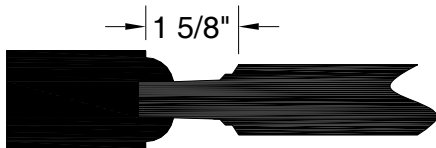

1-3/4" 1-1/4" PANEL 1/4 ROUND STICKING 20 MIN.



1-3/4" 5/8" PANEL 1/4 ROUND STICKING 20MIN


SQUARE STICKING




1-3/8" FLAT PANEL SQUARE STICKING




1-3/4" FLAT PANEL SQUARE STICKING

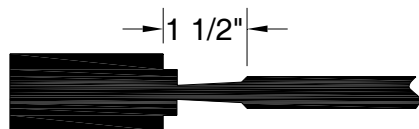


1-3/8" 9/16" PANEL SQUARE STICKING

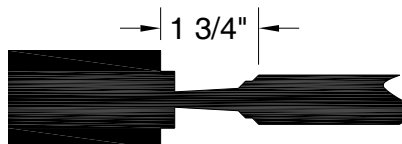


1-3/4" 7/8" PANEL SQUARE STICKING

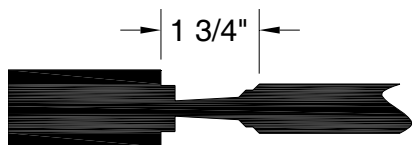

1-3/8" 7/8" PANEL SQUARE STICKING

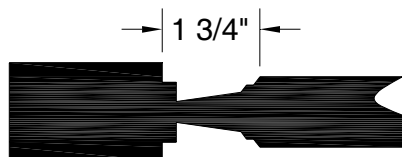

1-3/4" 1-1/4" PANEL SQUARE STICKING

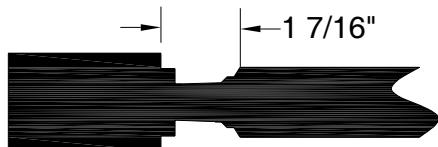

1-3/4" 1-1/4" PANEL SQUARE STICKING 20 MIN.



1-3/4" 5/8" PANEL SQUARE STICKING 20MIN